KRAFTWERK®
FAVORITE TOOLS SINCE 1979

EN

Instructions for changing the air piston


TROUBLESHOOTING

AIR GREASE GUN SERIE

PROBLEM ONE	Press the trigger, but the gun does not work.
POSSIBLE CAUSES	● The screws in the air piston unit are loose.
REMEDIES	➤ Follow the steps to disassemble the gun head and gun grip


Step One:

Use the tool to take the four screws off the gun head.

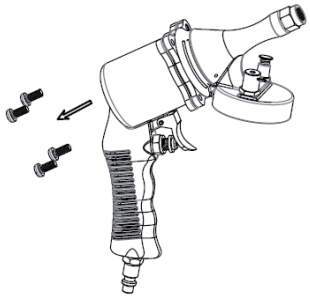


Step Two:

Pull out the gun grip.

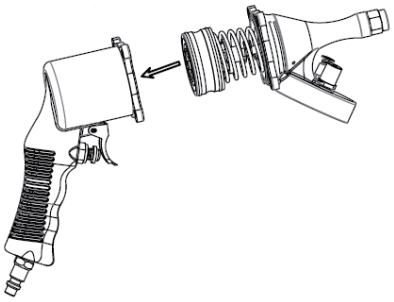

Step Three:

Take the air piston out

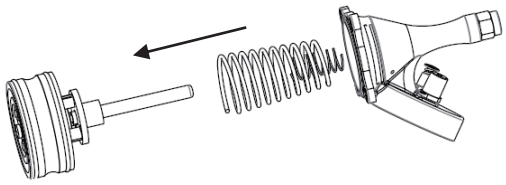


KRAFTWERK®
FAVORITE TOOLS SINCE 1979

➤ Follow the steps to change the air piston, and assemble the gun head and gun grip


Step One:

Put some grease on these three parts

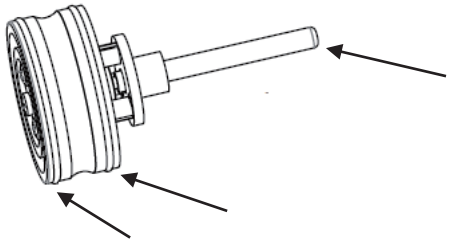


Step Two:

Put the big and small spring on the air piston

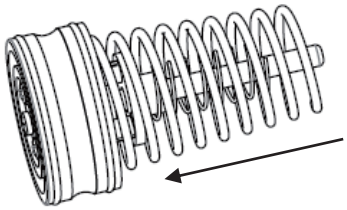

Step Three:

Align the hole of the gun head with rod, and put the air piston in the gun head

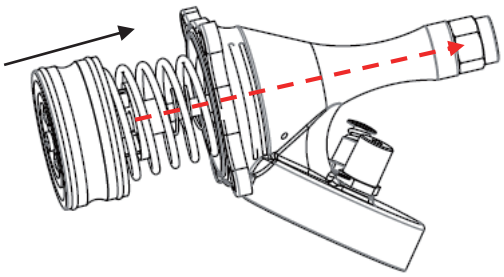

Step Four:

Connect the gun grip with the gun head, and screw in the four screws

